


## TSX QUICK REFERENCE GUIDE

### Monday Night Setup and Printer Test


Page 1



Lay the touch screen unit face down on the table. While gripping the black handle, pull the support bar up.

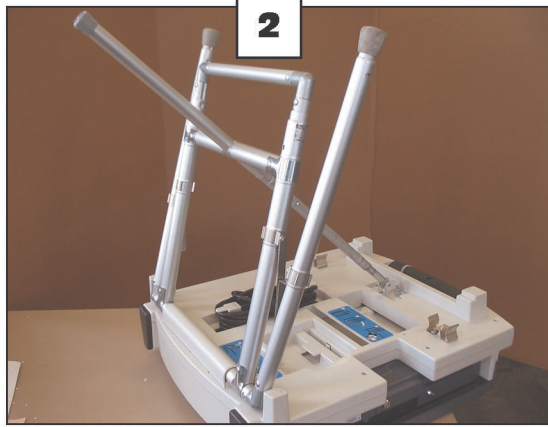


Remove the keypad, headset and power cord from the back.

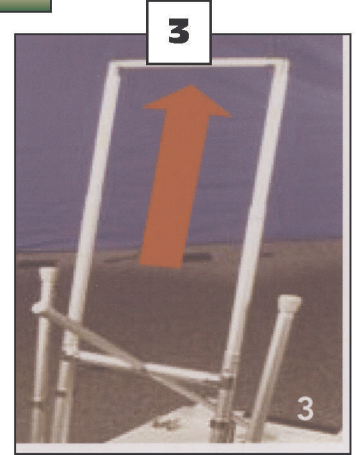


Continue pulling the inside legs all the way up until they are fully extended.




Check inside legs to make sure all four safety pins snap into place.

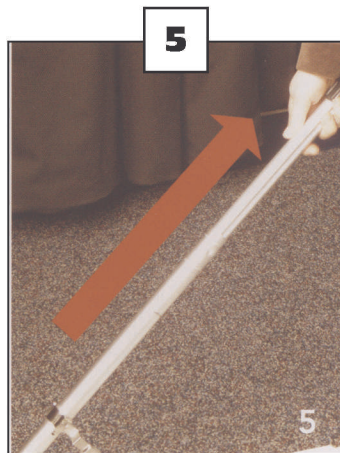


Grip the outside legs and pull up until the safety pin on each leg snaps into place.

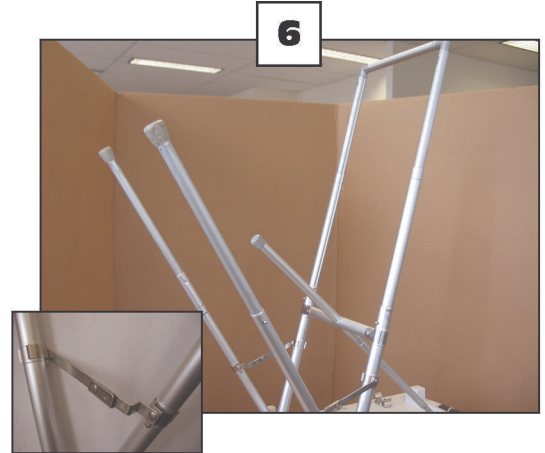


Pull the outside legs away from the base making sure the brackets are fully extended and locked. Make sure the grey panel doors are sealed and secured.

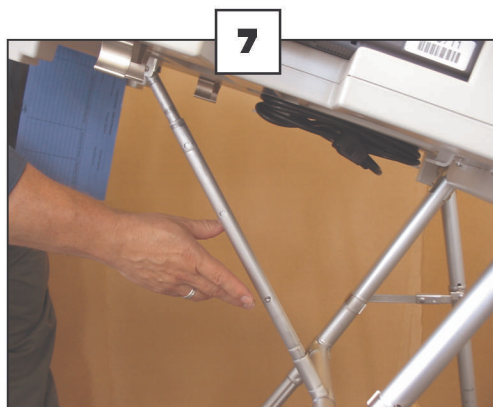

Carefully stand the unit up. To adjust the unit to the **SECOND level**, lift up on the handle while pressing the safety pin on the support bar.

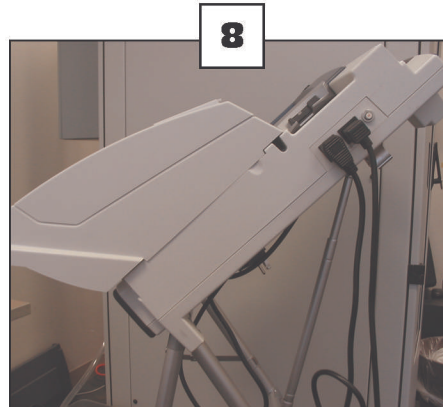

Plug the female end of the power cord in to the unit and the male end in to the outlet. To Daisy Chain the units, take the next unit and plug the male end into the first unit, up to six units.

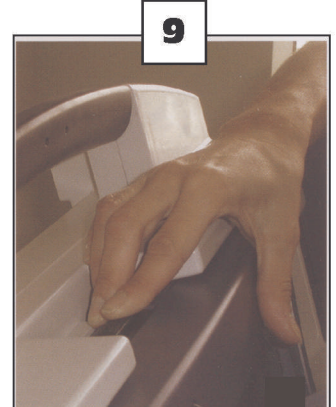

Open the front doors. Set up the VIBS unit by pressing the black button while pulling the tablet forward.